

## Remote Access File Update

---

### Description

This sheet explains how to install the Remote Access update files from the accompanying disk onto your computer. The entire update process should only take a few minutes. These instructions assume Remote Access is loaded onto the C drive and that you will be putting the update disk into the A drive.

**Important:** If you are updating Remote Access from a drive other than **A**, follow the instructions under "Loading the Remote Access update from your **B** drive".

### Getting to DOS from Windows™

From the program manager, locate the program group that contains the MS-DOS icon. Double-click this icon to switch from Microsoft® Windows™ to DOS. You should now see the C:\> prompt.

**Important:** You must quit the Remote Access program before loading the update files onto your computer.

### Loading the Remote Access update from your A drive

At the C:\> prompt, type in the following (type only the characters shown in bold):

C:\>**A:**<press enter>

You should now be at the A:\> prompt. Type the following:

A:\>**Update**<press enter>

A batch program on the update disk will now copy the files into the Remote Access directory on your computer. When completed, you'll see the following display:

A:\> X file(s) copied (x = numbers of files)

To return to Windows, type the following:

A:\> **exit**<press enter>

### Loading the Remote Access update from your B drive

At the C:\> prompt, type in the following (type only the characters shown in bold):

C:\>**B:**<press enter>

You should now be at the B:\> prompt. Type the following:

B:\>**UpdateB**<press enter>

A batch program on the update disk will now copy the files into the Remote Access directory on your computer. When completed, you'll see the following display:

B:\> X file(s) copied (x = numbers of files)

To return to Windows, type the following:

B:\> **exit**<press enter>

## Loading the Remote Access update from an alternate drive

At the C:\> prompt, type in the following (type only the characters shown in bold):

C:\> **copy d:\ \*.\* <press enter>** (substitute your drive letter for the letter **d**)

The DOS program will now copy the files into the Remote Access directory. When completed, you'll see the following display:

D:\> X file(s) copied (X=number of files)

D:\>

To return to Windows, type the following:

D:\> **exit<press enter>**

## Running the new version of Remote Access

Start the Remote Access program using the startup sequence detailed in the Remote Access User's Guide. Once the program has fully started, you can access the **About** command in the File menu to verify the update was successful. You should see the version number of the disk displayed in the About screen.

**NOTE:** *The updates in this version of Remote Access are documented in the **What's New** option of the program's File menu.*