

MODEL XR2400F WIRING DIAGRAM

Refer to the XR2400F Installation Guide (LT-0554) for a complete description of wiring connections.
Refer to the XR200/XR2400F Programming Guide (LT-0196) for complete programming instructions.

TYPES OF SERVICE

Suitable for manual fire alarm, automatic fire alarm, sprinkler supervisory, or water flow alarm.

Central Station DACT, MUX, Type 1, 2, and 3 signaling service may be provided.

Suitable for Remote Station Signaling Service with DMP Model 893 DACT. Also suitable for use with Radionics D127 Module.

Suitable for Grade AA Central Station with MPX, DNET, or HST communication.

Suitable for Grade AA with encryption when used with the iCOM-E™ High Security Internet Alarm Router.

Wire into 120 VAC 60 Hz circuit not controlled by switch. At least 1.85 Amps of available current.

See LT-0554, 893A Dual Phone Line Module section for complete 893A information.

NFPA 72


This equipment should be installed in accordance with Chapter 2 of the National Fire Alarm Code, ANSI/NFPA 72-1993, (National Fire Protection Association, Batterymarch Park, Quincy, MA 02269). Printed information describing proper installation, operation, testing, maintenance, evacuation planning, and repair service is to be provided with this equipment.

WARNING

THIS UNIT MAY BE PROGRAMMED TO USE AN ALARM VERIFICATION FEATURE THAT RESULTS IN DELAY OF THE SYSTEM ALARM SIGNAL FROM THE INDICATED CIRCUITS. THE TOTAL DELAY (CONTROL UNIT PLUS SMOKE DETECTORS) SHALL NOT EXCEED 60 SECONDS. NO OTHER SMOKE DETECTOR SHALL BE CONNECTED TO THESE CIRCUITS UNLESS APPROVED BY THE LOCAL AUTHORITY HAVING JURISDICTION.

Mount as shown in Installation Guide, LT-0554.

Verification Zones	Control Unit Delay 13.6 sec.	Smoke Model	Detector Delay ___ sec.
_____	_____	_____	_____

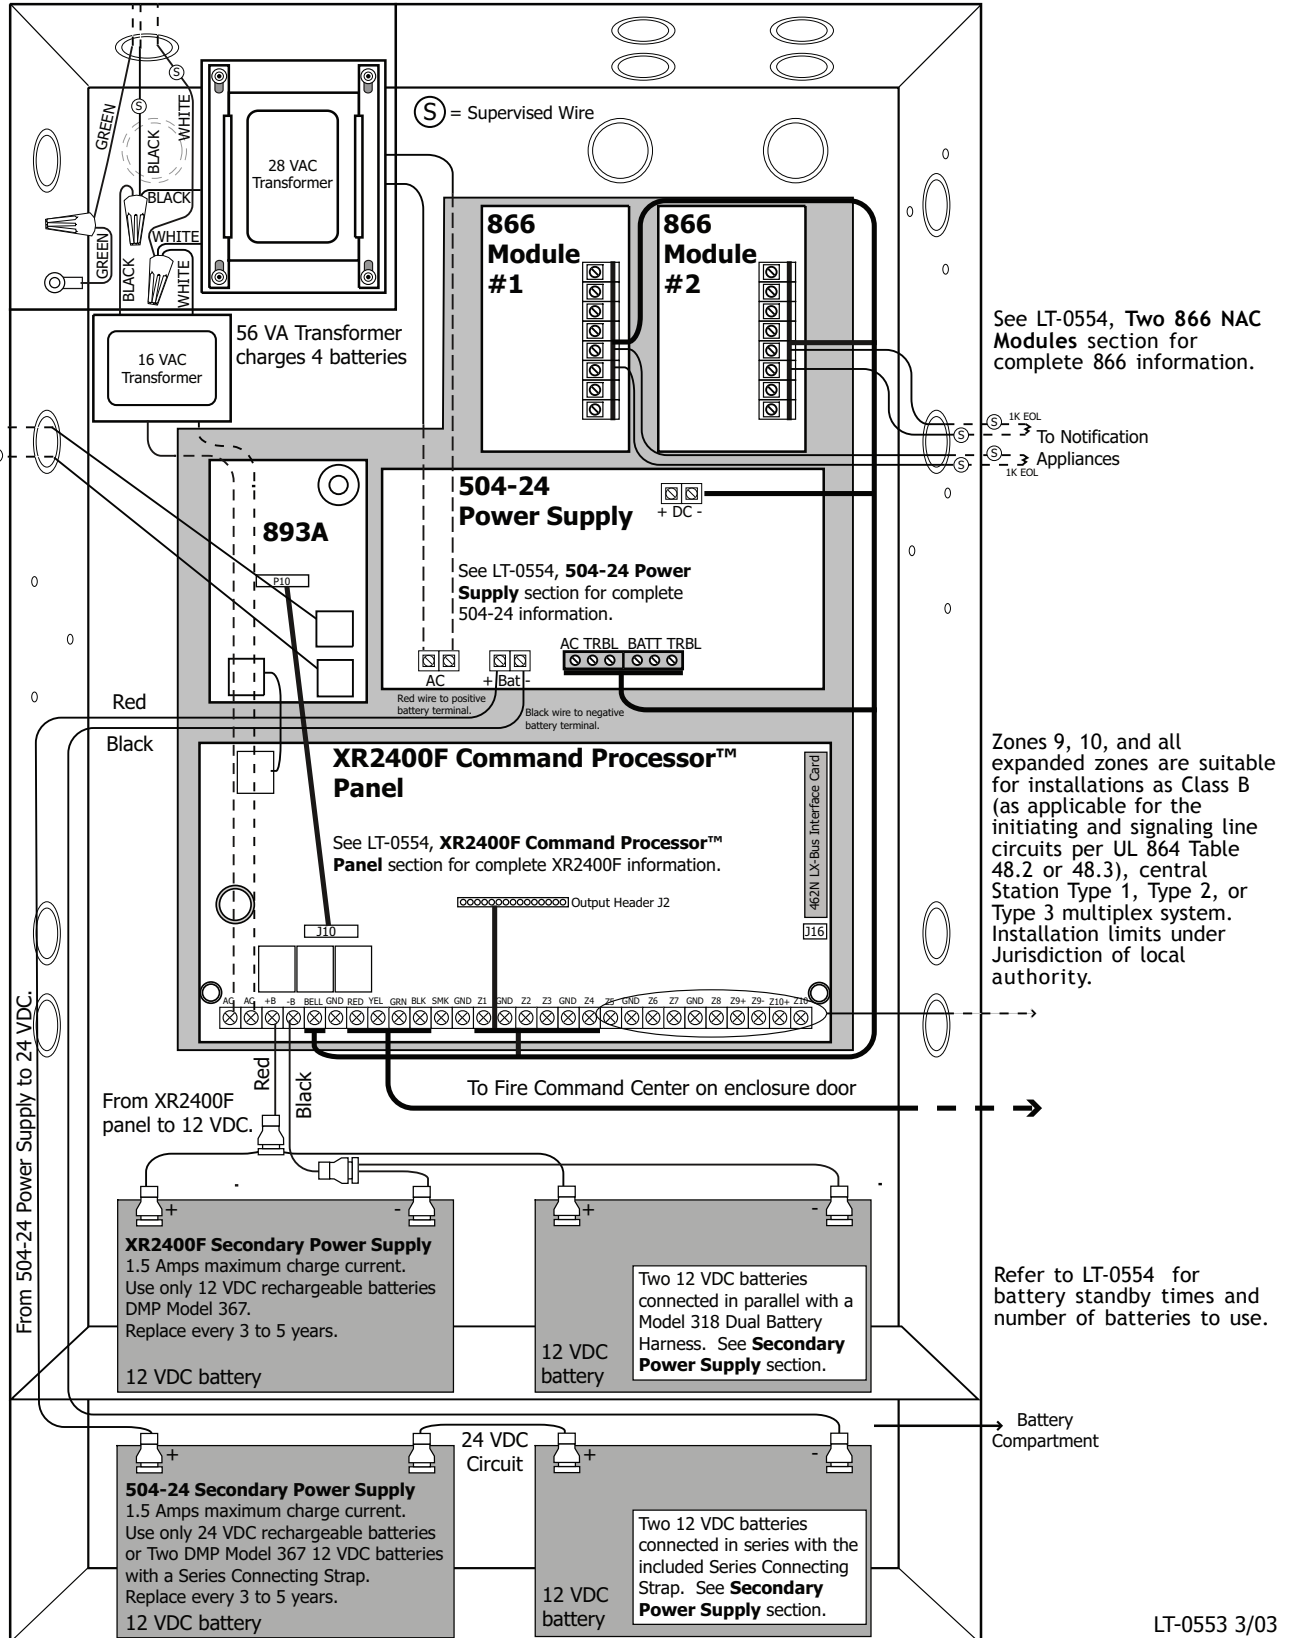

See LT-0554, Two 866 NAC Modules section for complete 866 information.

Zones 9, 10, and all expanded zones are suitable for installations as Class B (as applicable for the initiating and signaling line circuits per UL 864 Table 48.2 or 48.3), central Station Type 1, Type 2, or Type 3 multiplex system. Installation limits under Jurisdiction of local authority.

Refer to LT-0554 for battery standby times and number of batteries to use.