

1101 Universal Transmitter

Description

The 1101 is a two-input transmitter that is typically used for door and window applications. The 1101 provides two internal magnetic reed switches and an on-board terminal block to allow for external contact wiring. Both sets of contacts, internal and external, can be programmed to operate at the same time allowing for two independent zones from one transmitter. The 1101 features the Disarm/Disable operation to save battery life.

Using the on-board LED the 1101 Universal Transmitter provides built-in survey capability to allow for single-person installations, eliminating the requirement for an external survey kit. For added security, an internal case tamper switch is provided.

Compatibility

All DMP 1100 Series Wireless Receivers and Panels

Included Components

- One 1101 transmitter PCB mounted in a two-part housing (base and cover)
- One magnet housing and base
- One 3V lithium CR123A battery
- Hardware pack

Program the Transmitter in the Panel

Program the device as a zone in **ZONE INFORMATION** during panel programming. At the **SERIAL NUMBER:** prompt, enter the eight-digit serial number. Continue to program the zone as directed in the panel programming guide.

Program the Contacts

Refer to the Contact option under Zone Information in the appropriate panel programming guide. If using both internal and external contacts with Disarm/Disable functionality, be sure to program the external contact first. When using both contacts, you must use consecutive zone numbers. For UL listed installations, program the external contact as Normally Closed (N/C).

Refer to the following examples:

- **XR550 systems** - zones 562 and 563 or zones 793 and 794
- **XR150 systems** - zones 523 and 524 or zones 593 and 594
- **XT30/XT50 Series** - zones 31 and 32 or zones 34 and 41
- **XTLplus Series** - zones 3 and 4

Note: When a receiver is installed, powered up, or the panel is reset, the supervision time for transmitters is reset. If the receiver has been powered down for more than one hour, wireless transmitters may take up to an additional hour to send a supervision message unless tripped, tampered, or powered up. This operation extends battery life for transmitters. A missing message may display on the keypad until the transmitter sends a supervision message.

Select the Proper Location (LED Survey Operation)

The 1101 Transmitter provides a survey capability to allow one person to confirm transmitter communication with the receiver while the cover is removed. The 1101 Transmitter PCB Red Survey LED turns on whenever data is sent to the receiver then immediately turns off when the receiver acknowledgement is received. Pressing the tamper switch is a convenient way to send data to the receiver to confirm operation. When the tamper switch is pressed or released, the LED blinks once to indicate proper operation. When the transmitter does not receive an acknowledgement from the receiver the LED remains on for about 8 seconds to let you know communication is not established. Communication is also faulty when the LED flashes multiple times in quick succession. Relocate the transmitter or receiver until the LED immediately turns off indicating the transmitter and receiver are communicating properly. Proper communication between the

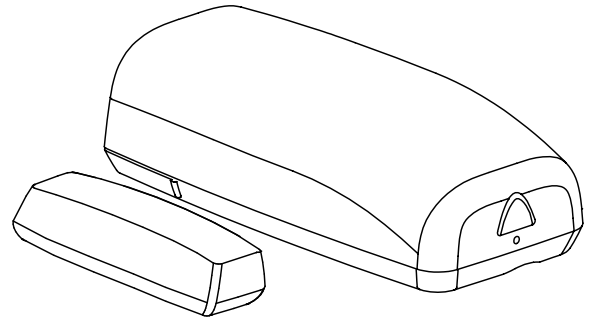


Figure 1: Transmitter and Magnet

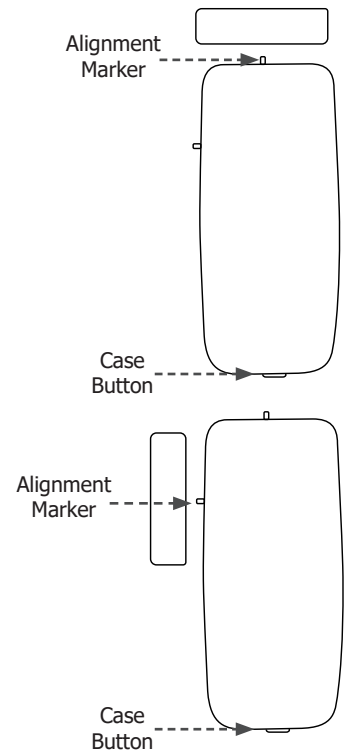


Figure 2. Transmitter and Magnet Placement Options

transmitter and receiver is verified when for each press or release of the tamper switch, the LED blinks immediately on and immediately off. Repeat this test to confirm five separate consecutive LED blinks. Any indication otherwise means proper communication has not been established.

Mount the Transmitter and Magnet Assemblies

For internal contact operation, the transmitter and magnet assembly should have no more than a 5/8" space between the assembled housings after installation. When mounting on metal surfaces, this distance is slightly less. For door installations, it is recommended the transmitter be mounted on the door frame and the magnet assembly be mounted on the door. See Figure 2 for transmitter and magnet placement options.

Magnet Assembly

Only one magnet assembly is required for internal reed switch operation. Depending on the installation requirements, either the standard magnet assembly or the commercial magnet assembly can be used. See Figures 3 and 4. Snap the supplied magnet into the desired housing prior to mounting.

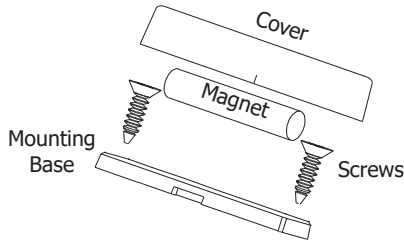


Figure 3: Standard Magnet Assembly

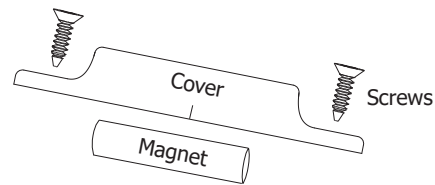


Figure 4: Commercial Magnet Assembly

Install the Transmitter

1. Remove the transmitter cover by pushing the button on the end of the cover and gently pulling upwards.
2. Remove the battery (if installed).
3. Hold the transmitter base in place with the reed switch near the area where you plan to mount the magnet.
4. Place one screw into the mounting hole location shown in Figure 5 and secure the housing to the surface.
5. Replace the battery.
6. Place the magnet housing base on the surface near one of the internal reed switch locations (see the magnet alignment markers on the transmitter base) and use the provided screws to secure the magnet base in place. See Figures 3 and 4.
7. Place the magnet and transmitter housing covers back on their bases.

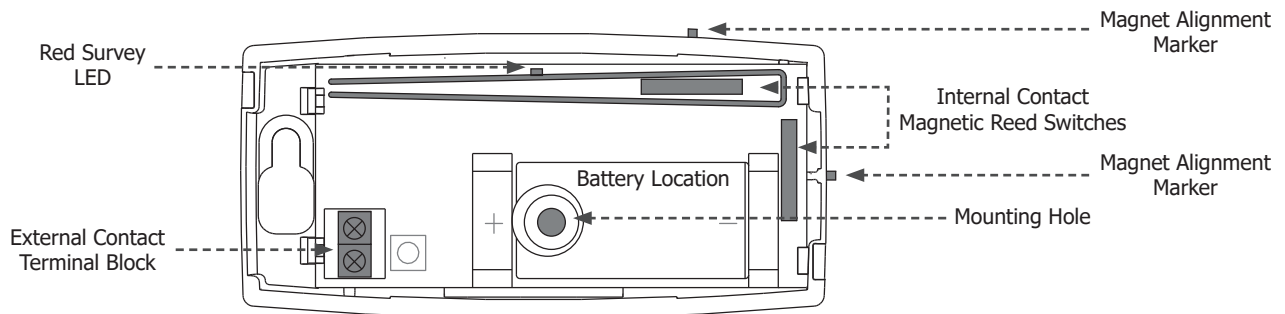


Figure 5: Internal and External Contact Points

Mount the Internal and External Contact

When connecting an external contact to the terminal block, using 18 or 22 gauge unshielded wire is recommended. Do not use twisted pair or shielded wire. Connect the external contact as normally open (N/O) or normally closed (N/C) without any end-of-line resistor.

Replace the Battery

Observe polarity when replacing the battery. Use only 3.0V lithium batteries, DMP Model CR123, or the equivalent battery from a local retail outlet. For UL installations, only use #123 batteries manufactured by Energizer or CR123A batteries manufactured by Panasonic or Tekcell.

Note: When setting up a wireless system, it is recommended to program zones and connect the receiver before installing batteries in the transmitters.

1. Remove the transmitter housing cover by pushing the button on the end and gently pulling upwards.
2. Remove the old battery and dispose of it properly.
3. Place the 3.0V lithium battery in the holder shown in Figure 5 and press into place.
4. Snap the cover back into place.



Caution: Risk of fire, explosion, and burns. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate. Properly dispose of used batteries.

Battery Life Expectancy

Typical battery life expectancy for DMP Model 1101 wireless transmitters is 5 years. DMP wireless equipment uses two-way communication to extend battery life.

The following situations can reduce battery life expectancy:

- If a receiver is unplugged or not installed.
Note: Transmitters continue to send supervision messages until a receiver returns an acknowledgement. After an hour the transmitter only attempts a supervision message every 60 minutes.
- Frequent transmissions, such as a door contact where messages are sent every time the door opens or closes.
- When installed in extreme hot or cold environments.
- Programming the Disarm/Disable feature as NO in areas where frequent transmissions occur.

The following situation can extend battery life expectancy:

- Extend transmitter supervision time in panel programming.
- Infrequent transmission trips, such as a window that rarely sends messages.
- Programming the Disarm/Disable feature as YES in areas where frequent transmissions occur.

Note: If the Disarm/Disable operation is enabled, then the 1101 Universal Transmitter will not send traffic reports or sensor activity notifications to the panel. Additionally, the Zone Monitor feature (Chime) will be disabled for the transmitter.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons. It must not be co-located or operated in conjunction with any other antenna or transmitter.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Information

This device complies with Industry Canada Licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

| | | |
|--|--|---|
| <p>Specifications</p> <p>Battery Life Expectancy 5 years (normal operation) Type 3.0V lithium CR123A See Battery Life Expectancy for full details.</p> <p>Frequency Range: 905-924 MHz</p> <p>Dimensions Transmitter Case 3.3" L x 1.6" W x 0.9" H Transmitter Base 3.3" L x 1.6" W x 0.1" H Magnet Housing 1.5" L x 0.5" W x 0.7" H Magnet Spacer 1.5" L x 0.5" W x 0.1" H</p> <p>Color White Housing Material Flame retardant ABS</p> <p>Patents U. S. Patent No. 7,239,236</p> | <p>Certifications</p> <p>FCC Part 15 Registration ID CCKPC0191 Industry Canada Registration ID 5251A-PC0191 ANSI/UL 1023 Household Burglar Alarm System Units Accessory Magnetically Activated Switch or Door Contact Transmitter ANSI/UL 634 Connections and Switches for use with Burglar Alarm Systems Accessory</p> | |
|  | <p>800-641-4282</p> <p>www.dmp.com</p> <p>Designed, Engineered and Assembled in U.S.A.</p> | <p>INTRUSION • FIRE • ACCESS • NETWORKS</p> <p>2500 North Partnership Boulevard</p> <p>Springfield, Missouri 65803-8877</p> |

LT-0694 1.04 © 2017 Digital Monitoring Products, Inc. 17153