

 
7800 SERIES GRAPHIC TOUCHSCREEN KEYPADS

Quick Reference Guide

All/Perimeter System

ARM

1. Press the homescreen shield in the center of the keypad.
2. Select **ALL** to arm all areas or **PERIM** to arm only the perimeter.
3. At **ENTER CODE-**, enter a user code at the keypad or present a credential to the proximity reader.

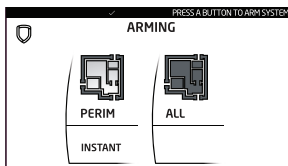

DISARM

 
1. Press the homescreen shield in the center of the keypad.
2. At **ENTER CODE-**, enter a user code at the keypad or present a credential to the proximity reader.



Home/Sleep/Away System and Home/Away System



ARM

1. Press the homescreen shield in the center of the keypad.
2. Select **HOME** to arm the perimeter, select **SLEEP** to arm everything except the bedroom areas, or select **AWAY** to arm all areas. Note: Home/Away Systems do not display the **SLEEP** option.
3. At **ENTER CODE-**, enter a user code at the keypad or present a credential to the proximity reader.

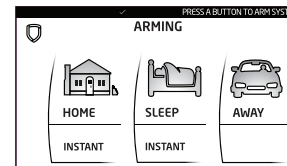

DISARM

  1. Press the homescreen shield in the center of the keypad.
2. At **ENTER CODE-**, enter a user code at the keypad or present a credential to the proximity reader.

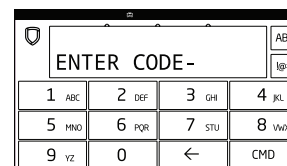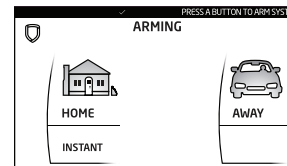

LT-1345 19115 © 2019 Digital Monitoring Products, Inc.

 
 
 
7800 SERIES GRAPHIC TOUCHSCREEN KEYPADS

Quick Reference Guide

Area System




ARM

1. Press the homescreen shield in the center of the keypad. Select **ARM**.
2. At **ENTER CODE-**, enter a user code at the keypad or present a credential to the proximity reader.
3. At **ALL? NO YES**, select **NO** to arm only selected areas and advance to step 4. Select **YES** to arm all areas authorized for your user code.
4. When you select **NO**, the display lists each authorized area for your user code followed by **NO YES**.
Select **YES** for each area you want to arm.
Select **NO** for each area you do not want to arm.

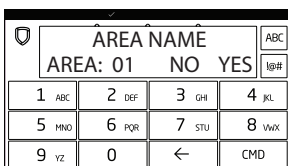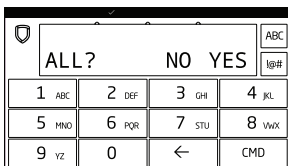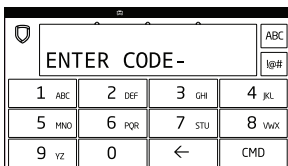

DISARM

   1. Press the homescreen shield in the center of the keypad. Select **DISARM**.
2. At **ENTER CODE-**, enter a user code at the keypad or present a credential to the proximity reader.
3. At **ALL? NO YES**, select **NO** to disarm only selected areas and advance to step 4. Select **YES** to disarm all areas authorized for your user code.
4. When you select **NO**, the display lists each authorized area for your user code followed by **NO YES**.
Select **YES** for each area you want to disarm.
Select **NO** for each area you do not want to disarm.

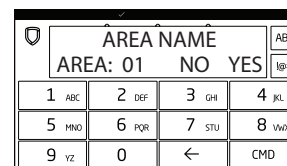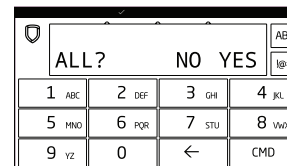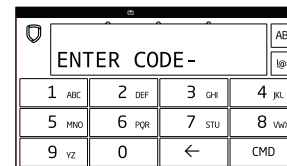

LT-1345 19115 © 2019 Digital Monitoring Products, Inc.