

DMP BATTERY GUIDE

Wireless, Panel, DMP Exclusive

WIRELESS

WIRELESS DEVICE	BATTERY TYPE	BRAND	DMP PART NUMBER
1101	CR123A	Energizer	CR123/8
1102	CR123A	Energizer	CR123/8
1103	CR123A	Energizer	CR123/8
1106	CR123A	Energizer	CR123/8
1107	CR2430	Sony	CR2430/10
1114	CR123A	Energizer	CR123/8
1115	CR123A	Energizer	CR123/8
1116	CR123A	Energizer	CR123/8
1117	CR123A	Energizer	CR123/8
1118	CR123A	Energizer	CR123/8
1119	CR123A	Energizer	CR123/8
1122	CR123A	Energizer	CR123/8
1126	CR123A	Energizer	CR123/8
1127	CR123A	Energizer	CR123/8
1128	CR123A	Energizer	CR123/8
1131	CR12600	FDK	CR12600/8
1135	CR123A	Energizer	CR123/8
1137	AA	Energizer Ultimate Lithium	N/A
1139	CR2450	Sony	CR2450/10
1141	CR2430	Sony	CR2430/10
1142	CR123A	Energizer	CR123/8
1144	CR2430	Sony	CR2430/10
1148	Non-Replaceable Battery	N/A	N/A
1154	CR123A	Energizer	CR123/8
1164	CR123A-Fire	Panasonic	CR123FIRE/8
1166	CR2477	Sony/Murata	CR2477/10
1168	CR123A-Fire	Panasonic	CR123FIRE/8
1183	CR123A-Fire	Panasonic	CR123FIRE/8
1184	CR123A-Fire	Panasonic	CR123FIRE/8

PANEL

AMP HOURS	BRAND	DMP PART NUMBER
1.3 Ah	UPG/Zeus	364
5.0 Ah	UPG/Zeus	368
7.0 Ah	UPG/Zeus	369
9.0 Ah	UPG/Zeus	365
18.0 Ah	UPG/Zeus	366

DMP EXCLUSIVE

DEVICE	BRAND	DMP PART NUMBER
1100R	DMP	1100RBAT800/8 (Internal Antenna version) 1100RBAT/8 (External Antenna version)
9060	DMP	9000BAT/8
9063	DMP	9000BAT/8
9862	DMP	9800BAT2400/8
XTLplus	DMP	XTL+800BAT/8 XTL+BAT3500/8
XTLtouch	DMP	XTLTOUCH800/8 XTLTOUCH4800/8