

V-4408D EIGHT-CHANNEL NETWORK VIDEO RECORDER (NVR)

Installation Guide

 


Figure 1: V-4408D Network Video Recorder (NVR)

DESCRIPTION

The SecureCom™ Video V-4408D Eight-Channel NVR connected to residential or commercial systems gives users a more powerful security tool to monitor cameras connected to their systems.

The V-4408D provides Power over Ethernet (PoE) capability, allowing you to supply power to a network camera using the same cable that transmits the data.

The V-4408D provides 2 TB of storage for around the clock, local recording. The V-4408D supports all ONVIF 2.4-compatible cameras and is viewable on the Virtual Keypad™ App or VirtualKeypad.com and can be monitored from any monitor with an HDMI cable or with Apple TV (Virtual Keypad™ App required).

Compatibility

- SecureCom Video Cameras
- ONVIF-Compliant Cameras
- Hikvision IP Cameras

What is Included?

- SecureCom Video V-4408D Eight-Channel NVR
- Power cable
- Three-button USB mouse
- 6 ft Network cable
- Hard drive cable
- Hardware pack

SecureCom
video

1

INSTALL THE V-4408D

1. Attach the included power cable to the back of the V-4408D. See Figure 2.
2. Attach the other end of the power cable into a wall outlet.
3. Press the power switch on the V-4408D to power it on.

2

CONNECT THE DEVICES

Connect cameras and any user interface devices to the ports in the back of the V-4408D. See Figure 2 for port locations.

Directly Connected (PoE/Network)

Connect one end of the network cable to one of the eight provided ports on the back of the V-4408D. Up to eight cameras can be connected using PoE. The V-4408D will automatically add any SecureCom or Hikvision camera that is connected to one of the eight PoE ports. When using PoE, no power cable is needed.

LAN

Connect a wired camera directly to the V-4408D using the LAN port.

USB

Connect USB devices like a mouse, keyboard, flash drive, or an external hard drive to the V-4408D using the two built-in USB ports.

HDMI

Connect one end of the HDMI cable to the V-4408D and the other end to a TV or monitor to monitor video.

 


Figure 2: V-4408D Ports

3

ACTIVATE THE V-4408D

Remotely

1. Log in to DMPDealerAdmin.com.
2. Select the customer's system account number that the V-4408D is being added to.
3. Click **Add NVR/Converter**.
4. Enter the **Serial Number** found on the NVR label.
5. Click **Next** and **Connecting** displays. When the NVR has successfully connected, the **NVR Serial Number** is assigned and can be changed.
6. Select the **Time Zone** and enable **Observe Daylight Savings Time** if observed by the area and enable the local user option.
7. Create an **NVR Username** and **Password** to create a local operator account for viewing pre-recorded video locally using an HDMI-connected device.
8. Click **Save**.

Locally

1. Click **Yes** on the Warning Screen to activate the NVR locally.
2. Type **securecom** into the **Old Password** field.
3. Type in a new password of your choosing and click **OK**. Your password should be between 8-16 characters and should consist of two of the following options; numbers, letters, special characters.
4. You will be notified that the password has been modified. The GUID (Globally Unique Identifier) file can be exported at a later time in case you forget your password.
5. After successfully activating the NVR, log in to DMPDealerAdmin.com.
6. Select the **Time Zone** and enable **Observe Daylight Savings Time** if observed by the area and enable the local user option.
7. Create an **NVR Username** and **Password** to create a local operator account for viewing pre-recorded video locally using an HDMI-connected device.
8. Click **Save**.

Note: Cameras can only be found if they are plugged into the PoE ports on the back of the NVR.

4 CUSTOMIZE THE CAMERAS

Remotely

1. Log in to DMPDealerAdmin.com.
2. Click the customer's system account number. All cameras connected to the V-4408D should display on the **System Information** screen.
3. Click on the default camera name to change the name of each camera.

Locally

1. After activating the NVR, select the VGA and HDMI resolution and click **Apply**.
2. From the home screen, right click and select **MENU**. You will be prompted to create a password for future access.
3. Select **Camera**. This will take you to the **Camera Management** screen.
4. From this screen, you are able to configure the camera to suit the installation.

V-4408D NETWORK VIDEO RECORDER (NVR)



Specifications

| | |
|--------------------|-------------------------|
| Temperature Range: | 0° C to 40° C |
| Humidity Range: | 32° F to 140° F |
| Dimensions: | 12.4"H x 15.2"W x 2.0"D |

Compatibility

SecureCom Wireless Video Cameras

- V-4010B-1 Indoor/Outdoor Bullet
- V-4020C-1 Indoor Cube PIR
- V-4030PT-1 HD IP Motorized Indoor
- V-4050D-1 Indoor/Outdoor Fixed Dome Infrared
- All Hikvision cameras

SecureCom
video

LT-1779 18413

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard
Springfield, Missouri 65803-8877

888-436-7832 | DMP.com