

1127C PIR Motion Detector

Description

1127C is an 1100 Series Wireless Wall Mount Curtain PIR. The Detection area is a 50' x 10' curtain using a fresnel lens. The PIR includes a case tamper and functionality to allow sensor configuration from the control panel. DMP Exclusive Features include Sensitivity Adjustment, Pulse Count, Walk Test, & Disarm Disable.

Features

- Remote configuration from panel
- Excellent R.F.I. and noise immunity
- Adjustable sensitivity from panel programming
- Pulse count selection allows multiple triggers before an alarm is initiated
- Walk Test mode initiated from panel
- Disarm Disable operation to save battery life
- Installs up to 8' wall height

Compatibility

- All DMP 1100 Series Wireless Receivers and panels

What is Included

The 1127C Series PIR Motion Detector includes the following:

- One PIR detector with DMP wireless transmitter
- Two CR123 batteries
- Zone name and number label
- Serial number label

Installation

For your convenience, an additional pre-printed serial number label is included. Prior to installing the device, record the serial number or place the pre-printed serial number label on the panel programming sheet. This number is required during programming. As needed, use the zone name and number label to identify a specific transmitter.

Selecting the Best Location (LED Survey Operation)

The PIR transmitter provides a survey capability to allow one person to confirm transmitter communication with the receiver while the cover is removed. The PIR transmitter PCB Red Survey LED turns on whenever the processor turns on to send data to the receiver then immediately turns off when the receiver acknowledgement is received and the processor shuts off. While in Walk Test mode, waving your hand in front of the PIR is a convenient way to send data to the receiver to confirm operation. The PIR circuit board LED lights to indicate motion and the Survey LED briefly lights to confirm communication.

When the transmitter does not receive an acknowledgement from the receiver, the transmitter Survey LED remains on for about 8 seconds to let you know communication is not established. Relocate the transmitter or receiver until the Survey LED immediately turns off indicating the transmitter and receiver are communicating properly. If the transmitter is not programmed into the panel, the Survey LED does not operate properly.

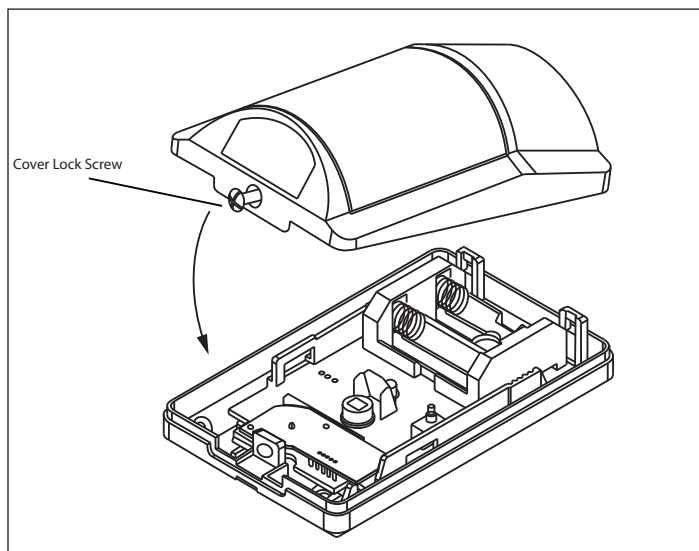


Figure 1: Remove the Cover

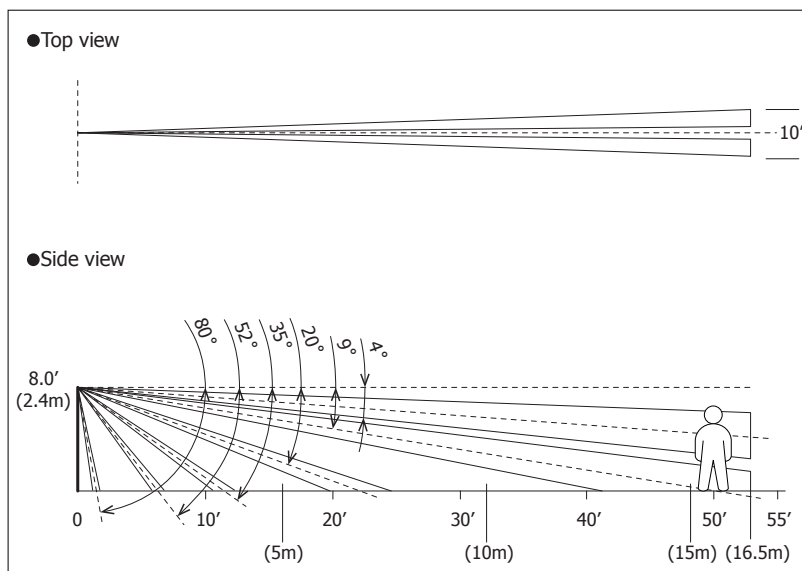


Figure 2: Detection Pattern

Mounting the Unit



Caution: You must be free of static electricity before handling sensor circuit boards. Touch a grounded, bare metal surface before touching circuit boards or wear a grounding strap.

Locate the unit:

- On a rigid vibration-free surface
- So the expected intruder movement is across the detection pattern

Do not locate the unit:

- On a surface exposed to moisture
- In any area containing excessive metallic surfaces
- Where it may be exposed to false alarm sources such as: direct sunlight, heat sources (heater, radiators, etc.) in the field of view or strong air drafts (fans, air conditioner, etc.)

Use the following steps to mount the PIR in the selected location.

1. Remove the front cover from the detector. Refer to Figure 1.
2. To expose mounting holes, remove the PCB from the back cover. Grasp the unit in both hands and using your thumbs, push on the battery case to slide the PCB toward the top of the back cover and lift out. See Figure 4.
3. Select the appropriate mounting holes on the back cover for either corner or flat wall mounting. See Figure 3.
4. With the Cover Lock Screw toward the bottom, attach the back cover to the wall using screws and wall anchors, do not over-tighten.
5. Reinstall the PCB in the back cover in the reverse order of Step 2.
6. Reinstall front cover.

Programming the PIR in the Panel

Program the device as a zone in **Zone Information** during panel programming. At the Serial Number: prompt, enter the eight-digit serial number. Continue to program the zone as directed in the panel programming guide.

Note: When a receiver is installed, powered up, or the panel is reset, the supervision time for transmitters is reset. If the receiver has been powered down for more than one hour, wireless transmitters may take up to an additional hour to send a supervision message unless tripped, tampered, or powered up. This operation extends battery life for transmitters. A missing message may display on the keypad until the transmitter sends a supervision message.

The 1127C PIR programming offers some unique features:

- Disarm-Disable operation to save battery life. Selecting YES for Disarm Disable in Zone Programming allows the PIR to be disabled for Night and Exit type zones while the area is disarmed. Default is YES.
- Pulse count selection allows multiple triggers before an alarm is initiated. The pulse count is the number of pulse inputs (trips) the PIR motion detector needs to sense before going into alarm. The pulse count in a high-security installation may be programmed to 2, ensuring that the detector sends an alarm more quickly than a pulse count of 4.
- Adjustable sensitivity from panel programming. Programming with a sensitivity of HIGH operates the PIR at maximum sensitivity. A sensitivity of LOW operates the PIR at 75% of maximum sensitivity. Programming a LOW sensitivity for installations in harsh environments may reduce false alarms.
- Walk Test mode initiated from panel. The Wireless PIR Walk Test is a 30-minute test allowing the installer to verify proper operation of PIR motion detectors in a system. Within one minute after the Wireless PIR Walk Test is initiated, the LED's on all 1127C PIR's are enabled to flash when the sensors detect motion.

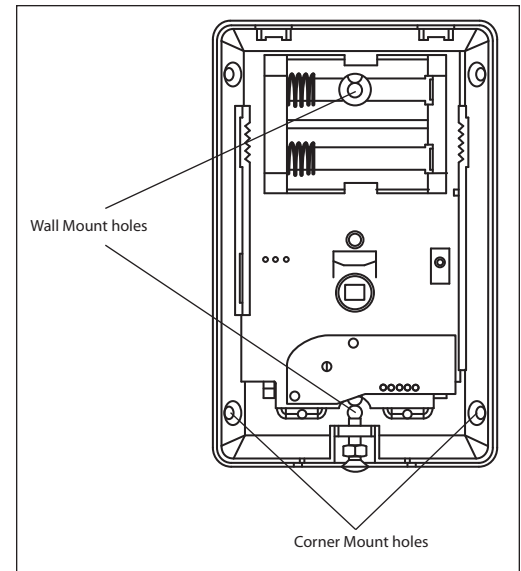


Figure 3: Mounting Holes

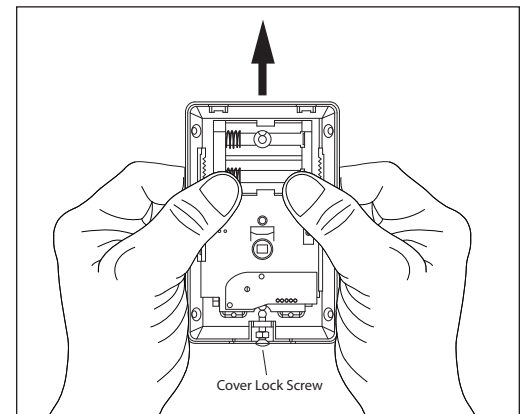


Figure 4: PCB Removal

Testing

Walk Test

1. From the Walk Test menu of the panel, select the PIR Walk Test to place the PIR in walk test mode (enabling the LED) for 30 minutes. After 30 minutes, the Walk Test automatically exits and the PIR returns to normal. Any 1127C PIR Transmitters that have DISARM DISABLE set to YES are temporarily enabled when the Walk Test is selected. Upon completion of Walk Test, the transmitter is disabled again.
2. After entering the walk test mode, thoroughly test the installation to insure proper protection pattern of the installed units. The walk test is a local test only and no results are sent to the Central Station.

Transmission Test



1. After programming the unit, close the cover to restore the tamper switch.
2. Verify that the keypad display indicates a signal received from the detector.

Installing or Replacing Batteries

Observe polarity when installing the battery. Use only 3.0V lithium batteries, DMP Model CR123.

Note: When setting up a wireless system, it is recommended to program zones and connect the receiver before installing batteries in the transmitters.

1. Remove the front cover. See Figure 1.
2. Remove the batteries (if installed) before installing new batteries.

Caution: Risk of fire, explosion, and burns. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate. Properly dispose of used batteries.

3. Observe polarity and insert the batteries into the battery holder.

Note: If the battery reaches the factory preset low level, a Low Battery signal is sent to the panel. The 1127C PIR remains operational for approximately 30 days to allow adequate time to replace the battery.

Battery Life Expectancy

Typical battery life expectancy for a DMP Model 1127C Wireless PIR is five years, based on 300 trips per day. Battery life can be increased 40%, to seven years, by programming the Disarm Disable feature to YES. DMP wireless equipment uses two-way communication to extend battery life.

The following situation can extend battery life expectancy:

- Enabling the Disarm Disable feature in Zone Programming allows the PIR to be disabled while the area is disarmed. This eliminates frequent motion from being detected in a high traffic area during the disarmed period.
- Extend transmitter supervision time in panel programming.

The following situations can reduce battery life expectancy:

- If a receiver is unplugged, or not installed.
Note: Transmitters continue to send supervision messages until a receiver returns an acknowledgement. After an hour the transmitter only attempts a supervision message every 60 minutes.
- Programming the Disarm Disable feature as NO where frequent transmissions, in areas of high traffic, cause messages to be sent every time movement is detected.
- When installed in extreme hot or cold environments.

Maintenance

When installed and used properly, the unit provides years of service with minimal maintenance. To ensure proper operation, perform unit testing annually as described. Clean the cover and optional bracket with a water dampened cloth as needed to keep it free of dust and dirt. Always test the unit after cleaning.

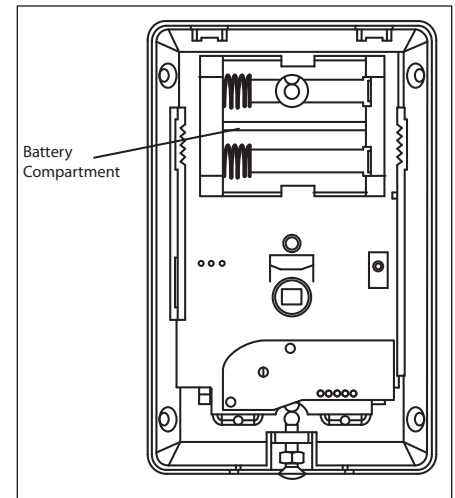


Figure 5: Battery Compartment

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The 1100 Series wireless system is a two-way supervised wireless design. It is compliant with FCC rules as they pertain to 900 MHz Spread Spectrum devices. In rare instances it has been observed that certain 900 MHz cordless telephones may occasionally experience a clicking sound on the telephone while in use. If this occurs, it may be resolved by selecting a different channel on the cordless telephone, or replacing the cordless phone with a different brand or model of 900 MHz telephone or other cordless telephone.


To comply with RF exposure requirements, a minimum distance of 20cm must be maintained between the antenna and all persons.

This device complies with Industry Canada Licence-exempt RSS standard(s). Operation is subject to the following two conditions:

Industry Canada Information

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Specifications		Ordering Information	
Battery		1127C-W	Curtain PIR
Life Expectancy	5 to 7 years	CR123	3.0V battery
Type	3.0V CR123		
See Battery Life	Expectancy for details.		
Transmit condition	Alarm, Low Battery		
Mounting height	8 feet		
Frequency Range	903-927 MHz		
Dimensions	2.7" W x 1.77" D x 4.33" H		
Color	White		
		Patents	
		U.S. Patent No. 7,239,236	
		Certifications	
		FCC Part 15: CCKPC0152	
		Industry Canada: 5251A-PC0152	
		ANSI/UL 1023	Household Burglar Alarm System Units Accessory
		ANSI/UL 639	Intrusion Detection Unit Accessory
	800-641-4282	INTRUSION • FIRE • ACCESS • NETWORKS	
	www.dmp.com	2500 North Partnership Boulevard	
	Designed, Engineered and Assembled in U.S.A.	Springfield, Missouri 65803-8877	