

# 1101 SERIES WIRELESS UNIVERSAL TRANSMITTER

## Installation Guide

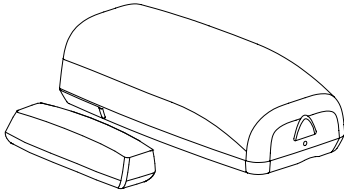


Figure 1: 1101 Housing

### DESCRIPTION

The 1101 Series Wireless Universal Transmitters are two-way supervisory wireless transmitters typically used for door and window applications. The 1101E features 128-bit AES encryption.

The 1101 Series provides a cover tamper, magnetic reed switch, and an on-board terminal block to allow for external contact wiring.

Both sets of contacts, internal and external, can be programmed to operate at the same time. This allows two independent zones to operate from one 1101.

The 1101 Series also features Disarm/Disable functionality. When this option is set to YES, Zone Tripped messages are disabled when the system is disarmed to allow for extended battery life.

Supervision, Tamper, and Low Battery are the only messages sent to the panel when the system is disarmed.

### Compatibility

All DMP XT Series and XR Series and all 1100 Series Wireless Receivers.

To enable encryption on 1101E models, Version 183 is required for XT and XR Series panels and Version 300 is required for Wireless Receivers.




### What is Included?

- One 1101 Wireless Universal Transmitter
- One magnet with standard and commercial housing and base.
- One 3.0 V lithium CR123A battery
- Hardware pack



## 1 PROGRAM THE PANEL

Refer to the panel programming guide as needed.

1. At a keypad, enter 6653 (PROG) to access the Programmer Menu.  
 **Note:** Steps 2 and 3 are for the 1101E to enable encryption. If using an 1101, proceed to step 4 to continue the installation.
2. (1101E only) Navigate to System Options. At the **1100 ENCRYPTION** prompt, select **ALL** to only add encrypted wireless devices to the system. Select **BOTH** to allow both encrypted and non-encrypted wireless devices to be programmed.
3. (1101E only) The default passphrase appears at the **ENTER PASSPHRASE** prompt. Press **CMD** to keep the default. Press any select key or area to change the passphrase and enter an 8-character hexadecimal string (0-9, A-F).
4. In **ZONE INFORMATION**, enter the wireless **ZONE NO:** and press **CMD**.
5. Enter the **ZONE NAME** and press **CMD**.
6. Select the **ZONE TYPE** and press **CMD**.
7. At **NEXT ZN?**, select **NO**.
8. Select **YES** when **WIRELESS?** displays.
9. Enter the eight-digit **SERIAL#** and press **CMD**.
10. At **CONTACT:**, select either **INTERNAL** or **EXTERNAL**.  
 **Note:** Use consecutive zone numbers if using both internal and external contacts.
11. Enter the **SUPRVSN TIME** and press **CMD**.
12. At **DISARM DISABLE:**, select **NO** or **YES**.  
 **Note:** Program the external contact first if using both internal and external contacts with Disarm/Disable functionality.
13. At the **NEXT ZN?** prompt, select **YES** to finish programming or select **NO** for additional programming options.

## 2 INSTALL THE BATTERY

Use a 3.0V lithium battery, a DMP Model CR123A battery, or an equivalent model from Sony or Murata. For listed installations, use either an Energizer® 123 battery or a CR123A battery manufactured by Panasonic or Tekcell. Keep in mind, when setting up a wireless system, program zones and connect the receiver before installing the battery.

1. Push the button on the end of the 1101 and separate the two halves. See Figure 1.
2. Observe polarity and place the battery in the holder and press it into place.

# 3

## SELECT A LOCATION

The 1101 provides a Survey LED capability to allow one person to confirm communication with the wireless receiver or panel while the cover is removed.

1. With the cover removed, hold the 1101 in the exact desired location.
  2. Press the tamper switch to send data to the panel and determine if communication is confirmed or faulty.
- ✓ **Confirmed:** If communication is confirmed, for each press or release of the tamper switch, the LED blinks immediately on and immediately off.
  - ✗ **Faulty:** If communication is faulty, the LED remains on for about 8 seconds or flashes multiple times in quick succession. Relocate the 1101 or receiver until the LED confirms clear communication.

# 4

## MOUNT THE 1101

### Mount the Transmitter

1. Remove the battery.
2. Hold the transmitter in place with the magnetic reed switch closest to where the magnet will be mounted. See Figure 2. Ensure the transmitter and the magnet will be no more than 1/2" (1.3cm) apart.
3. Place the supplied #4 screw into the mounting hole and secure the transmitter to the surface.
4. Replace the battery.
5. Snap the transmitter cover back onto the base.

### Mount the Magnet

#### Standard Installation

1. Push the supplied magnet into the magnet cover.
2. Hold the magnet base on the door closest to the magnetic reed switch, no more than 1/2" (1.3cm) from the transmitter.
3. Use the provided #4 screws to mount the base. See Figure 3.
4. Snap the cover onto the base.

#### Commercial Installation

1. Push the supplied magnet into the magnet cover.
2. Place and hold the magnet cover directly on the door closest to the magnetic reed switch, no more than 1/2" (1.3cm) apart from the transmitter.
3. Use the provided #4 screws to mount the cover. See Figure 4.

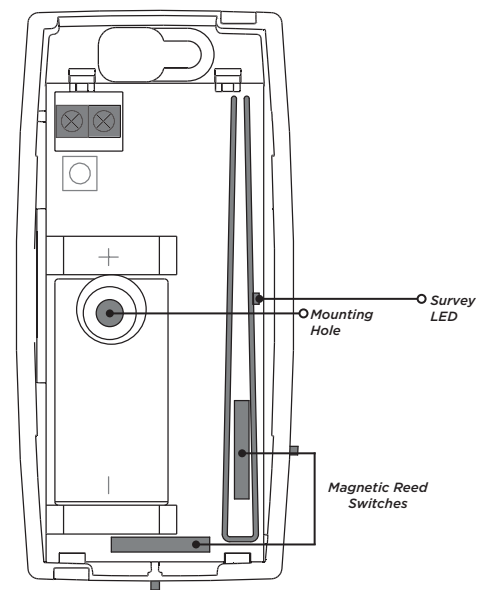


Figure 2: Transmitter Components

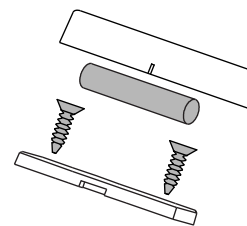


Figure 3: Standard Installation

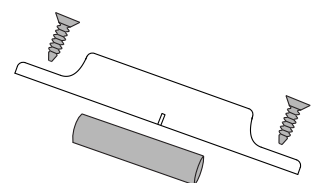


Figure 4: Commercial Installation

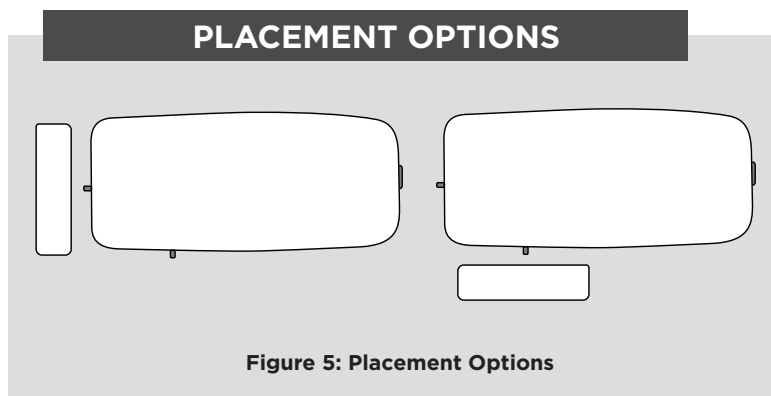


Figure 5: Placement Options

# 5 TEST THE 1101


After installing the 1101, perform a Walk Test to confirm the 1101 is communicating with the panel. At the keypad, enter **8144** (WALK) and select **WLS**. If the 1101 fails to check in at the keypad, relocate the wireless device, receiver, or panel.

## ADDITIONAL INFORMATION

### Connect External Contacts

Refer to *Contacts* and *Zone Information* in the appropriate panel programming guide for more information. DMP recommends using 18 or 22 AWG un-shielded wire. If you use both the magnet reed switch in the 1101 transmitter and an external contact, use consecutive zone numbers when connecting them to the panel.

1. Remove the cover of the 1101.
2. Use a flat head screwdriver to loosen the two screws on the external contact terminal block. See Figure 6.
3. Insert external contact wiring into the 1101 terminal block and re-tighten the screws.
4. Connect the other ends of the wires to the external contact as either normally open (N/O) or normally closed (N/C) without an end-of-line resistor.

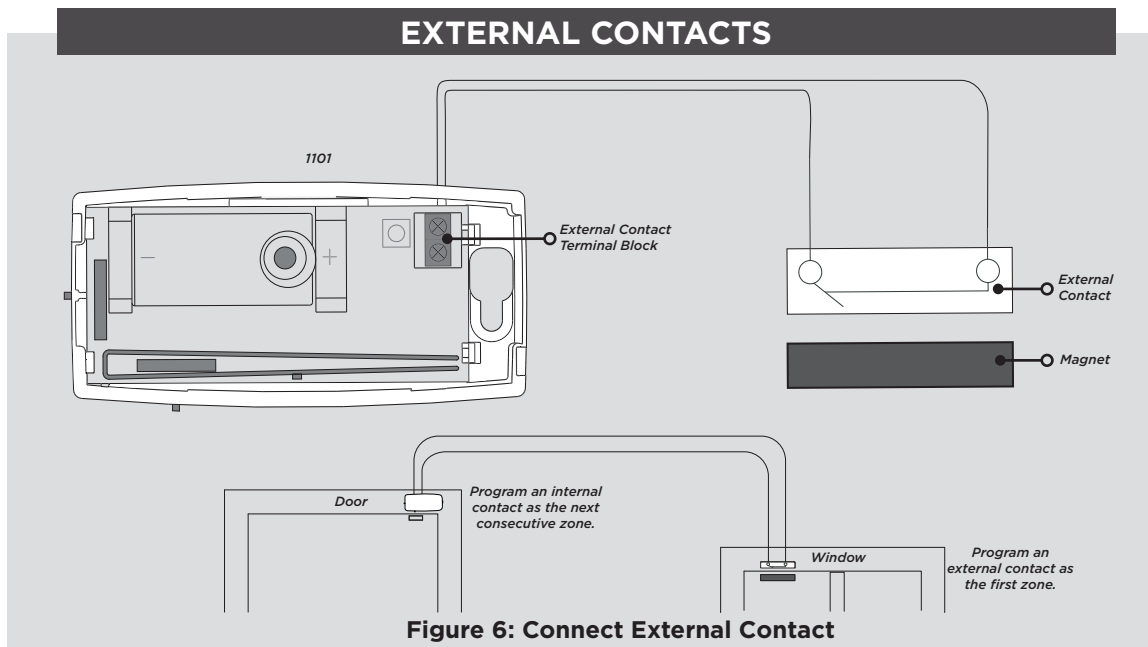

### Replace the Battery

1. Open the transmitter housing to expose the inside of the 1101.
2. Remove the old battery, observe polarity, and place the new battery in the holder.
3. Snap the cover back on the 1101.

### Sensor Reset to Clear LOBAT

Once the battery is replaced, a sensor reset is required at the keypad to clear the **LOBAT** message.

1. On an LCD Keypad, press and hold **2** for two seconds.  
On a Graphic Touchscreen Keypad, press **RESET**.
2. Enter your user code, if required. The keypad displays **SENSORS OFF** followed by **SENSORS ON**.

## FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

The antenna used for this transmitter must be installed to provide a separation distance of at least 20cm (7.874 in.) from all persons. It must not be located or operated in conjunction with any other antenna or transmitter.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Industry Canada Information

This device complies with Industry Canada Licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

This system has been evaluated for RF Exposure per RSS-102 and is in compliance with the limits specified by Health Canada Safety Code 6. The system must be installed at a minimum separation distance from the antenna to a general bystander of 7.87 inches (20 cm) to maintain compliance with the General Population limits.

*Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:*

1. *l'appareil ne doit pas produire de brouillage, et*
2. *l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

*L'exposition aux radiofréquences de ce système a été évaluée selon la norme RSS-102 et est jugée conforme aux limites établies par le Code de sécurité 6 de Santé Canada. Le système doit être installé à une distance minimale de 7.87 pouces (20 cm) séparant l'antenne d'une personne présente en conformité avec les limites permises d'exposition du grand public.*

## 1101 Series Wireless Universal Transmitter

### Specifications

#### Battery

Life Expectancy	5 Years (normal operation)
Type	3.0V lithium CR123A

#### Frequency Range

905-924 MHz

#### Dimensions


Transmitter Case	3.3" L x 1.6" W x 0.9" H
Transmitter Base	3.3" L x 1.6" W x 0.1" H
Magnet Housing	1.5" L x 0.5" W x 0.7" H
Magnet Spacer	1.5" L x 0.5" W x 0.1" H

#### Color

White (1101-W), Black (1101-B)

#### Housing Material

Flame retardant ABS



### Patents

U.S. Patent No. 7, 239, 236

### Ordering Information

1101-W Standard Wireless Universal Transmitter  
1101E-W Encrypted Wireless Universal Transmitter

### Certifications

FCC Part 15 Registration ID CCKPC0191

Industry Canada Registration ID 5251A-PC0191

Underwriters Laboratory (UL) Listed

- ANSI/UL 1023 Household Burglar Alarm System Units Accessory Magnetically Activated Switch or Door Contact Transmitter
- ANSI/UL 634 Connections and Switches for use with Burglar Alarm Systems Accessory



Designed, engineered,  
and manufactured in  
Springfield, Missouri using U.S.  
and global components.

LT-0694 1.04 19064

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard  
Springfield, Missouri 65803-8877

866-266-2826 | dmp.com