

1114 Wireless Four-Zone Expander

Description

The 1114 Wireless Four-Zone Expander increases the number of reporting zones available on DMP Panels. Use the four zones with burglary or other non-powered devices. The 1114 is designed to operate on one CR123A battery or connect to an optional 12VDC power supply.

Compatibility

All DMP 1100 Series Wireless Receivers and Panels

What is included

The 1114 includes the following:

- One 1114 Wireless Four-Zone Expander
- One 3V Lithium CR123A battery
- Hardware pack with 470k EOL Resistors

Optional items available:

- Model 376L DC Power Supply
- Model 505-12 12VDC Power Supply

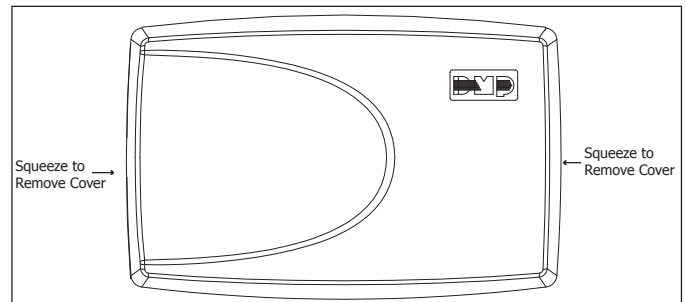


Figure 1: 1114 Wireless Four-Zone Expander

Programming the 1114 in the Panel

Program the 1114 Wireless Four-Zone Expander as a zone in Zone Information. At the SERIAL NUMBER prompt, enter the eight-digit serial number. Refer to the panel programming guide as needed.

Note: When a receiver is installed, powered down and powered up, the panel is reset, or programming is complete, the supervision time is reset. If the receiver has been powered down for more than one hour, the 1114 may take up to an additional hour to send a supervision message unless tripped, tampered, or powered up. This operation extends battery life. A missing message may display on the keypad until the supervision message is sent.

Selecting the Proper Location (LED Survey Operation)

The 1114 provides a survey capability to allow one person to confirm communication with the receiver while the cover is removed. The 1114 PCB Red Survey LED (See Figure 2) turns on whenever data is sent to the receiver then immediately turns off when the receiver acknowledgement is received. Pressing the tamper switch is a convenient way to send data to the receiver to confirm operation. When the 1114 does not receive an acknowledgement from the receiver the survey LED remains on for about 8 seconds to let you know communication is not established. Communication is also faulty when the LED flashes multiple times in quick succession. Relocate the 1114 or receiver until the LED immediately turns off indicating the 1114 and receiver are communicating properly. Proper communication between the 1114 and receiver is verified when for each press or release of the tamper switch, the LED blinks immediately on and immediately off.

Installing the 1114

Mount the 1114 on a flat surface such as a wall or single-gang box. When using the optional Model 376L plug-in power supply, mount the 1114 near a wall outlet. See Figure 2 for mounting hole locations.

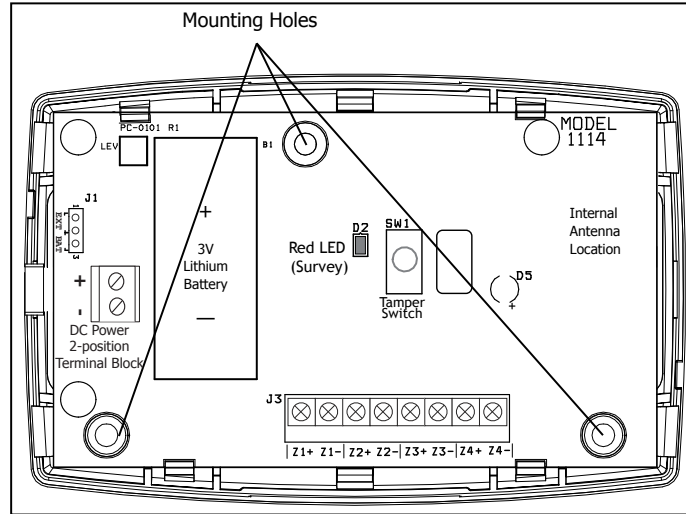


Figure 2: 1114 Four-Zone Expander PCB

1114 Zone Wiring

It is recommended to locate zone devices within 100 feet of the 1114 zone expander. Use 22 or 18 AWG wire to complete the connections between the 1114 zone expander Zones 1 through 4 and each field device. Each zone terminates with one of the included 470k EOL resistors as shown.

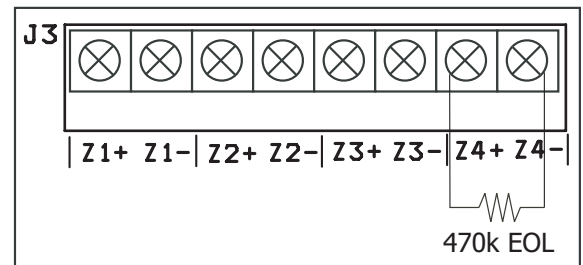


Figure 3: 1114 Zone Terminals

Powering the 1114

The 1114 can be powered by:

- CR123A 3V battery
- Model 376L plug-in power supply
- 12VDC Power Supply

Note: When setting up a wireless system, it is recommended to program zones and connect the receiver before installing batteries in the 1114 or connecting the optional power supply.

Battery Power

Observe polarity when installing the battery. Use only 3V Lithium batteries, DMP Model CR123, or the equivalent battery from a local retail outlet. Do not connect the power supply when operating using battery power.

1. Squeeze the cover left and right sides together to remove. See Figure 1.
2. Install the supplied jumper on the two J1 pins next to BAT to enable battery operation.
Note: Battery operation is not enabled if the jumper is on the J1 pins next to EXT.
3. If replacing the battery, remove the old battery and dispose of it properly.
4. Place the 3V Lithium battery in the holder and press into place. See Figure 2 for Battery location.
5. Snap the cover back into place.



Caution: Properly dispose of used batteries. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate. Risk of fire, explosion, and burns.

Battery Life Expectancy

Typical battery life expectancy for the 1114 is three years. Refer to the panel programming guide as needed.

DMP wireless equipment uses two-way communication to extend battery life.

The following situation can extend battery life expectancy:

- Extend transmitter supervision time in panel programming.

The following situations can reduce battery life expectancy:

- If a receiver is unplugged or not installed.

Note: Transmitters continue to send supervision messages until a receiver returns an acknowledgement. After an hour the transmitter only attempts a supervision message every 60 minutes.

- When installed in extreme hot or cold environments.

Optional External DC Plug-in Power Supply

When using the optional Model 376L plug-in DC power supply, mount the 1114 near a wall outlet. Do not install a battery when operating using the plug-in power supply. The power supply does not charge the battery.

Use the following steps to connect the plug-in power supply:

1. Squeeze the left and right cover sides together to remove. See Figure 1.
2. Install the supplied jumper on the two J1 pins next to EXT to enable power supply operation.

Note: Power supply operation is not enabled if the jumper is on the J1 pins next to BAT.

3. Wire the power supply to the J2 terminal block. Connect the Black wire with the White stripe to the positive terminal and the Black wire to the negative terminal. See Figure 4.
4. Snap the cover back into place.
5. Plug the Model 376L power supply into a 110VAC outlet.

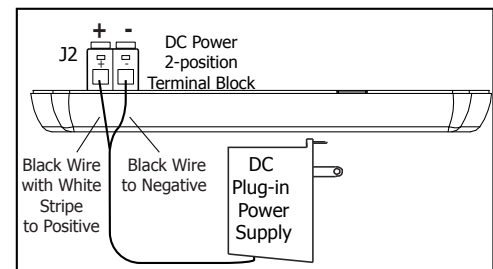


Figure 4: 1114 Side View

Optional External 12VDC Power Supply

The 1114 can also be powered from a 12VDC power supply such as a DMP Model 505-12. Use 22 AWG wire to connect to the power supply. Do not install a battery when operating using the external power supply. The power supply does not charge the battery.

Use the following steps to connect the power supply:

1. Squeeze the left and right cover sides together to remove. See Figure 1.
2. Install the supplied jumper on the two J1 pins next to EXT to enable power supply operation.

Note: Power supply operation is not enabled if the jumper is on the J1 pins next to BAT.

3. Using 22 AWG wire, connect the J2 terminal block to the J6 terminal on the 505-12 power supply PCB. See Figure 5.
4. Observe positive and negative polarity on all connections.
5. Snap the cover back into place.

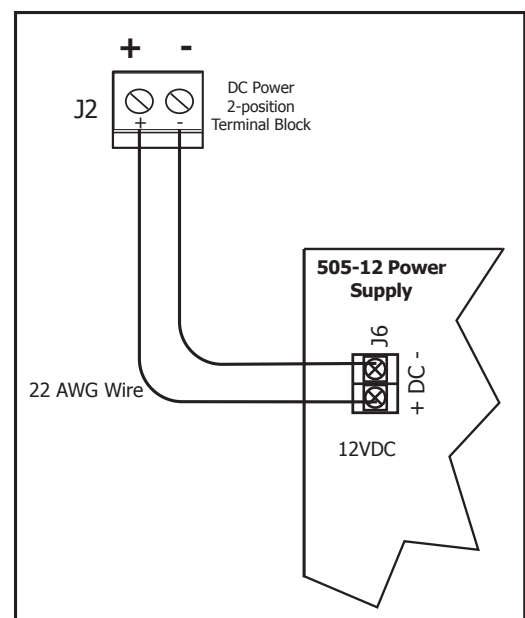


Figure 5: Power Supply Connection

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm (7.874 in.) from all persons. It must not be located or operated in conjunction with any other antenna or transmitter.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specifications

Battery

Life Expectancy 3 years
Type 3V Lithium CR123A
See Battery Life Expectancy for full details.

Frequency Range 905-924 MHz
Dimensions 4.65" L x 3.1" W x 1.4" H
Color White
Housing Material Flame retardant ABS

Accessories

CR123 DMP 3V Lithium Battery
376L DC Plug-in Power Supply
505-12 12VDC Power Supply

Compatibility

The 1114 Wireless Four-Zone Expander is compatible with:
1100D Series Wireless Receiver Version 105 or higher
1100X Series Wireless Receiver Version 105 or higher
XT50 panels with integrated wireless receiver
XTLplus panels with integrated wireless receiver
XTLC panels with integrated wireless receiver
XTLN/XTLN-WIFI panels with integrated wireless receiver
XR150/XR550 Series panels
XR100/XR500 Series panels Version 119 or higher

Patents

U. S. Patent No. 7,239,236

Certifications

FCC Part 15 Registration ID CCKPC0101
IC Registration ID 5251A-PC0101



800-641-4282

www.dmp.com

Designed, Engineered and
Assembled in U.S.A.

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard

Springfield, Missouri 65803-8877