

1117 Wireless LED Annunciator

Description

The 1117 Wireless LED Annunciator provides one remote LED annunciator that can be used to visually notify the user that an alarm has occurred since the system was armed and other standard annunciator functions. The 1117 can be controlled from a DMP panel and programmed to respond to conditions such as armed area annunciation, ambush alarm, burglary alarm, exit timer, entry timer, schedules, or communication failure. The 1117 is designed to operate on one CR123A battery or connect to an optional 12VDC power supply.

Compatibility

All DMP 1100 Series Wireless Receivers and Panels

What is Included

The 1117 includes the following:

- One 1117 Wireless LED Annunciator
- One 3V Lithium CR123A battery
- Hardware pack

Optional items available:

- Model 376L DC Power Supply
- Model 505-12 12VDC Power Supply

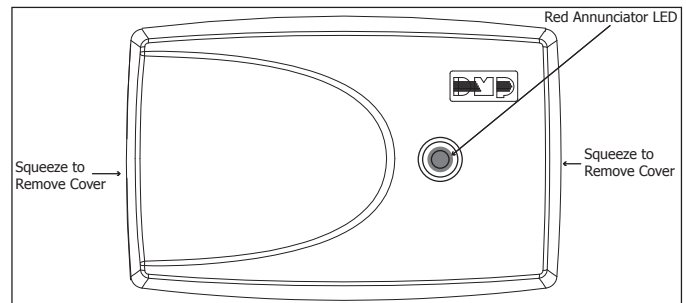


Figure 1: 1117 Wireless LED Annunciator

Programming the Annunciator in the Panel

Specific output numbers are available for wireless devices. Program the 1117 in Output Options as an Arm-Alarm Output. In Output Information enter the output number, output name, eight-digit serial number, and supervision time.

To indicate whether the wireless device responds within 15 seconds to trip the output (slow response):

- For XTLplus (LT-1434) Series use panel output numbers 51-54
- For XR150/XR550 (LT-1232), XR100 (LT-0896), and XR500 (LT-0679) Series, use panel output numbers 450-474
- For XT30/XT50 (LT-0981) and XTLC (LT-1108), and XTLN/XTLN-WIFI (LT-1221) Series, use panel output numbers 31-34

To indicate whether the wireless device responds within 1 second to trip the output (fast response):

- For XTLplus (LT-1434) Series use panel output numbers 61-64
- For XR150/XR550 (LT-1232), XR100 (LT-0896), and XR500 (LT-0679) Series, use panel output numbers 480-499
- For XT30/XT50 (LT-0981) and XTLC/XTLN/XTLN-WIFI (LT-1221) Series panel output numbers 41-44

Note: When a receiver is installed, powered down and powered up, the panel is reset, or programming is complete, the supervision time is reset. If the receiver has been powered down for more than one hour, the 1117 may take up to an additional hour to send a supervision message unless tripped, tampered, or powered up. This operation extends battery. A missing message may display on the keypad until the supervision message is sent.

Selecting the Proper Location (LED Survey Operation)

The 1117 provides a survey capability to allow one person to confirm communication with the receiver while the cover is removed. The 1117 PCB Red Survey LED (see Figure 2) turns on whenever data is sent to the receiver then immediately turns off when the receiver acknowledgement is received. Pressing the tamper switch is a convenient way to send data to the receiver to confirm operation. When the 1117 does not receive an acknowledgement from the receiver the survey LED remains on for about 8 seconds to let you know communication is not established. Communication is also faulty when the LED flashes multiple times in quick succession. Relocate the 1117 or receiver until the LED immediately turns off indicating the 1117 and receiver are communicating properly. Proper communication between the 1117 and receiver is verified when for each press or release of the tamper switch, the LED blinks immediately on and immediately off. Repeat this test to confirm five separate consecutive LED blinks. Any indication otherwise means proper communication has not been established.

1117 LED Annunciation Operation

The 1117 LED annunciation differs based on whether it is powered by a battery or an optional power supply. When an optional power supply is connected, additional annunciations are available.

The following table shows the 1117 LED annunciation operation options.

Panel Programmed Action	Power Supply Annunciation	Battery Power Annunciation
STEADY	LED turns on and remains on	None
PULSE	LED alternates one second on, one second off	Winks (Flashes Quickly)
MOMENTARY	LED turns on once for one second	
TEMPORAL (XR500 and XR100 Series only)	LED repeats the following sequence: <ul style="list-style-type: none"> • on 1/2 second, off 1/2 second, • on 1/2 second, off 1/2 second • on 1/2 second, off 1-1/2 second 	

Installing the 1117

Mount the 1117 on a flat surface such as a wall or single-gang box. When using the Model 376L plug-in power supply, mount the 1117 near a wall outlet. See Figure 2 for mounting hole locations.

Powering the 1117

The 1117 can be powered by:

- CR123A 3V Lithium battery
- Model 376L plug-in power supply
- 12VDC Power Supply

Note: When setting up a wireless system, it is recommended to program outputs and connect the receiver before installing batteries in the 1117 or connecting the optional power supply.

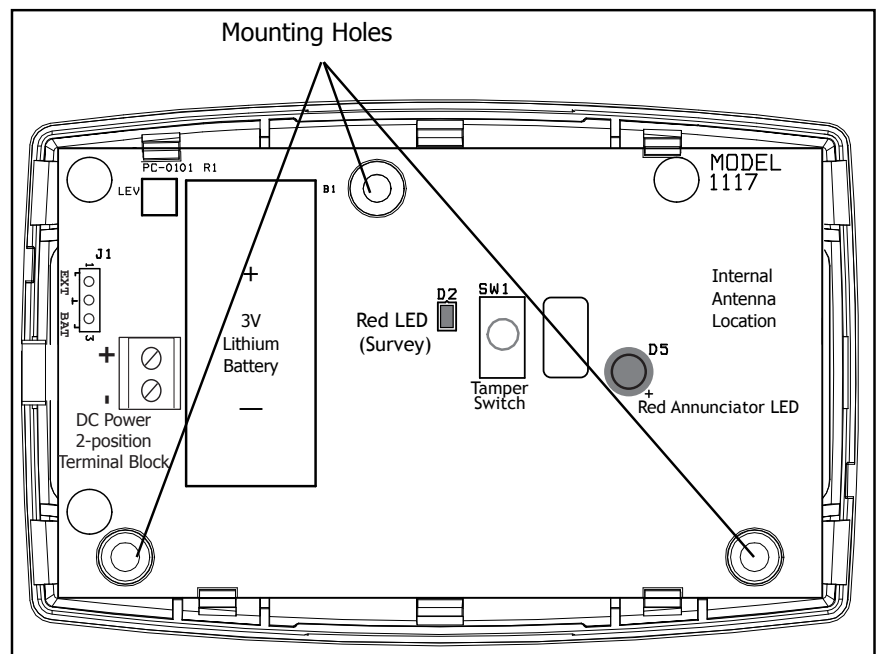


Figure 2: 1117 LED Annunciator PCB

Battery Power

Observe polarity when installing the battery. Use only 3V Lithium batteries, DMP Model CR123, or the equivalent from a local retail outlet. Do not connect a power supply when operating using battery power.

1. Squeeze the cover left and right sides together to remove. Lift the cover up and away from the base to avoid damage to the Red LED. See Figure 1.
2. Install the supplied jumper on the two J1 pins next to BAT to enable battery operation.

Note: Battery operation is not enabled if the jumper is on the J1 pins next to EXT.

3. If replacing the battery, remove the old battery and dispose of it properly.
4. Place the 3V Lithium battery in the holder and press into place. See Figure 2 for Battery location.
5. Snap the cover back into place.



Caution: Properly dispose of used batteries. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate. Risk of fire, explosion, and burns.

Battery Life Expectancy

Typical battery life expectancy for the 1117 is two months when programmed as a fast response output and five years when programmed as a slow response output. Refer to the series programming guides as needed. DMP wireless equipment uses two-way communication to extend battery life.

The following situation can extend battery life expectancy:

- Minimal use of the LED for annunciation.
- Extend supervision time in panel programming.
- Program the annunciator as a slow response output in panel programming.

The following situations can reduce battery life expectancy:

- If a receiver is unplugged, too far away, or not installed.

Note: The 1117 continue to send supervision messages until a receiver returns an acknowledgement. After an hour the 1117 only attempts a supervision message every 60 minutes.

- When installed in extreme hot or cold environments.

Optional External DC Plug-in Power Supply

When using the optional Model 376L plug-in DC power supply, mount the 1117 near a wall outlet. Do not install a battery when operating using the plug-in power supply. The power supply does not charge the battery.

Use the following steps to connect the plug-in power supply:

1. Squeeze the left and right cover sides together to remove. See Figure 1.
2. Install the supplied jumper on the two J1 pins next to EXT to enable power supply operation.

Note: Power supply operation is not enabled if the jumper is on the J1 pins next to BAT.

3. Wire the power supply to the J2 terminal block. Connect the Black wire with the White stripe to the positive terminal and the Black wire to the negative terminal. See Figure 3.
4. Snap the cover back into place.
5. Plug the power supply into a 110VAC outlet.

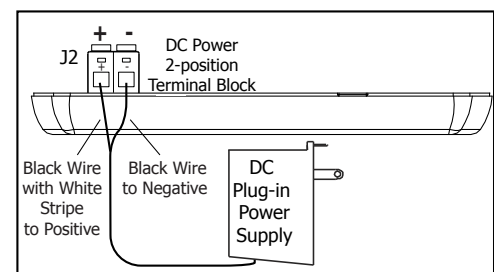


Figure 3: 1117 Side View

Optional External 12 VDC Power Supply

The 1117 can also be powered from a 12VDC power supply such as a DMP Model 505-12. Do not install a battery when operating using the external power supply. The power supply does not charge the battery.

Use the following steps to connect the power supply:

1. Squeeze the left and right cover sides together to remove. See Figure 1.
2. Install the supplied jumper on the two J1 pins next to EXT to enable power supply operation.

Note: Power supply operation is not enabled if the jumper is on the J1 pins next to BAT.

3. Using 22 AWG wire, connect the J2 terminal block to the J6 terminal on the 505-12 power supply PCB. See Figure 4.
4. Observe positive and negative polarity on all connections.
5. Snap the cover back into place.

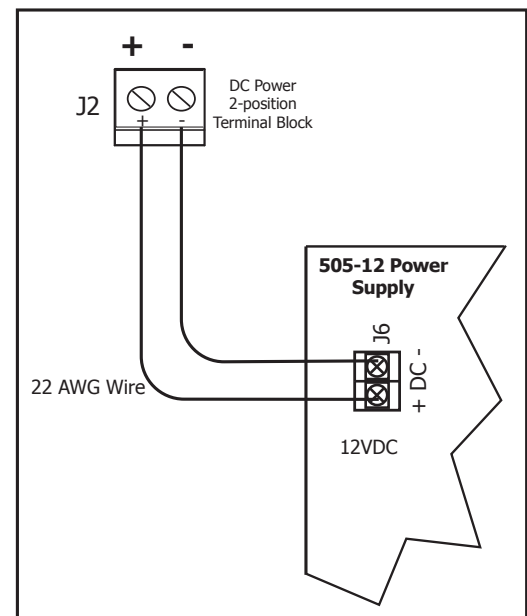


Figure 4: Power Supply Connection

1117 Testing

To test the 1117 from a keypad, access the User Menu Outputs On/Off option. The 1117 LED should light within 15 seconds of entering the assigned output number and selecting on. Refer to the User Guide as needed.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The antenna used must be installed to provide a separation distance of at least 20 cm (7.874 in.) from all persons. It must not be co-located or operated in conjunction with any other antenna.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

<p>Specifications</p> <p>Battery</p> <p>Life Expectancy 2 months (Fast Response) 5 years (Slow Response)</p> <p>Type 3V Lithium CR123A</p> <p>See Battery Life Expectancy for full details.</p> <p>Frequency Range 905-924 MHz</p> <p>Dimensions 4.65" L x 3.1" W x 1.4" H</p> <p>Color White</p> <p>Housing Material Flame retardant ABS</p> <p>Accessories</p> <p>CR123 DMP 3V Lithium Battery</p> <p>376L DC Plug-in Power Supply</p> <p>505-12 12VDC Power Supply</p>	<p>Compatibility</p> <p>The 1117 Wireless LED Annunciator is compatible with:</p> <p>1100D Series Wireless Receiver Version 105 or higher</p> <p>1100X Wireless Receiver Version 105 or higher</p> <p>XT50 panel with integrated wireless receiver</p> <p>XTLplus panel with integrated wireless receiver</p> <p>XTLC panel with integrated wireless receiver</p> <p>XTLN/XTLN-WIFI panels with integrated wireless receiver</p> <p>XR150/XR550 panels</p> <p>XR100/XR500 panels Version 119 or higher</p> <p>Patents</p> <p>U. S. Patent No. 7,239,236</p> <p>Certifications</p> <p>FCC Part 15 Registration ID CCKPC0101</p> <p>IC Registration ID 5251A-PC0101</p>
	<p>800-641-4282</p> <p>www.dmp.com</p> <p>Designed, Engineered and Assembled in U.S.A.</p> <p>INTRUSION • FIRE • ACCESS • NETWORKS</p> <p>2500 North Partnership Boulevard</p> <p>Springfield, Missouri 65803-8877</p>