

1119 Wireless Door Sounder

Description

The Model 1119 Wireless Door Sounder is a single-zone transmitter equipped with a battery powered sounder that provides 100db to 110db of annunciation. The 1119 provides a cover tamper, sounder cutoff, survey LED, and two batteries. The 1119 zone input can be connected to a standard door contact, typically attached to an emergency exit door for local annunciation during the day and burglary alarm annunciation at night. The sounder always automatically turns on when the door opens. The 1119 sounder is silenced after one second or five minutes or can be silenced remotely from the panel at disarm or from the user menu.

Compatibility

- All DMP 1100 Series Wireless Receivers and Burglary Panels

Included Components

- One 1119 with zone input and wireless sounder
- Two 3.0V Lithium CR123A batteries
- Hardware pack with a 470k EOL resistor and serial number labels

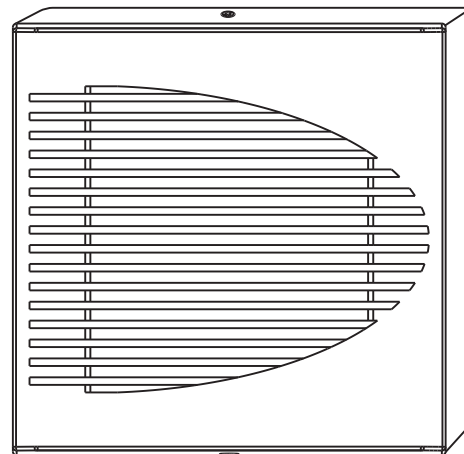


Figure 1: 1119 Wireless Sounder

100/110 Decibel Jumper

The siren is equipped with a 100/110 decibel (dB) jumper and a two-position header to change the decibel output. The siren is shipped at the 110 dB output level with the jumper placed on one pin for storage. If the 100 dB setting is required, place the jumper over both header pins. See Figure 3.

Sounder Cutoff Jumper

The 1119 provides a sounder cutoff jumper that causes the 1119 to automatically turn off the sounder after one second or five minutes depending on the jumper position.

When the onboard 1119 zone is tripped, the 1119 turns on the sounder output for one second if the jumper is placed on the two left pins or for five minutes if the jumper is placed on the two right pins.

When the sounder output is programmed in Output Information and is turned on by an output command from the panel, the 1119 always turns the sounder output off automatically after five minutes regardless of the position of the jumper.

In addition, when the sounder output was turned on by a panel output command and then automatically turned off by the 1119 after five minutes, the sounder output cannot be turned back on by the panel until the 1119 receives a panel output off command as described below.

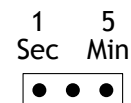


Figure 2: Sounder Cutoff Jumper

Silencing the Sounder

The following panel operations can silence the sounder:

- Bell Output (XR150/XR550)
Program the output in Bell Output so the output turns off at the Bell Cutoff time if less than five minutes.
- Disarming (all panels)
Program the output in the Alarm Action output section of the zone that will be disarmed and set the action to Steady.
- Outputs On/Off (all panels)
From the User Menu, select Outputs On/Off and enter the output number and choose Off.
- Output follows 1119 zone condition (all panels)
Program the output in the Alarm Action output section of the 1119 zone programmed in Zone Information and set the action to Follow. When the 1119 zone restores, the output is turned off.

See *Programming the 1119 in the Panel* section for additional information.

Zone Bypassed

When the 1119 sounder output and the Alarm Action output become bypassed in the panel, subsequent tripping of the 1119 zone turns on the sounder. However, because the 1119 panel zone is bypassed, the panel turns the sounder output off within a few seconds.

Programming the 1119 in the Panel

To allow the 1119 sounder to be turned on or silenced by the panel, the OUTPUT serial number must be programmed as an output in Output Information and assigned to the 1119 zone ALARM ACTION output section in Zone Information.

If the 1119 is programmed as a zone, but the output is not programmed into the panel at Output Information, the 1119 annunciates up to five minutes dependant on the sounder cutoff jumper setting and cannot be silenced from the panel.

If the 1119 is programmed into Output Information, but not assigned to the 1119 zone ALARM ACTION output section, the sounder only operates for a few seconds when the 1119 zone is tripped even if the sounder cut off jumper is set to five.

Output Programming

Enter the output number, output name, and eight digit OUTPUT serial number. For extended battery life, a 15 second slow response output is recommended. This gives the 1119 an estimated battery life of 2 1/2 years, depending on usage. A list of the slow response outputs for each panel is listed below.

XR150/XR550: 450-474

XTLC/XT30/XT50: 31-34

XTLplus: 51-54

Use the following output numbers for fast response outputs that respond within 1 second. The typical battery life is 3 months. Fast response outputs are listed below.

XR150/XR550: 480-499

XTLC/XT30/XT50: 41-44

XTLplus: 61-64

Zone Programming

Program the 1119 in Zone Information as a Day type zone (DY) when local annunciation at the keypad is required in addition to the sounder when the panel is disarmed. If the 1119 sounder is to be the only annunciation during the disarmed state, program as a Night type zone (NT). At the Serial Number: prompt enter the eight-digit ZONE serial number. To allow the panel to control the output, program the output number in the zone ALARM ACTION.

Supervision Time

When programming the 1119 in both Zone Information and Output Information, the supervision time should be the same, typically 240 minutes for burglary applications.

Note: When a receiver is installed, powered down and powered up, the panel is reset, or programming is complete, the supervision time is reset. If the receiver has been powered down for more than one hour, the 1119 may take up to an additional hour to send a supervision message unless tripped, tampered, or powered up. This operation extends battery life. A missing message may display on the keypad until the supervision message is sent. Refer to the panel programming guide as needed.

Selecting the Proper Location (LED Survey Operation)

The 1119 provides a survey capability to allow one person to confirm communication with the receiver while the cover is removed. The 1119 PCB Red Survey LED (See Figure 3) turns on whenever data is sent to the receiver then immediately turns off when the receiver acknowledgement is received. Pressing the tamper switch is a convenient way to send data to the receiver to confirm operation. When the 1119 does not receive an acknowledgement from the receiver the survey LED remains on for about 8 seconds to let you know communication is not established. Communication is also faulty when the LED flashes multiple times in quick succession. Relocate the 1119 or receiver until the LED immediately turns off indicating the 1119 and receiver are communicating properly. Proper communication between the 1119 and receiver is verified when for each press or release of the tamper switch, the LED blinks immediately on and immediately off.

Installing the 1119

Mount the 1119 on a flat wall or single-gang box away from large metal objects. See Figure 3 for mounting hole locations.

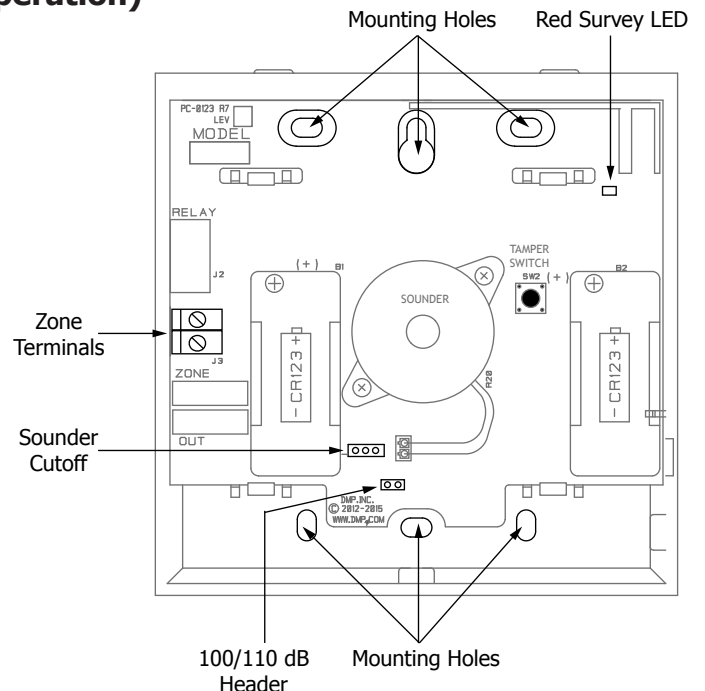


Figure 3: 1119 Wireless Sounder PCB

1119 Zone Wiring

It is recommended to locate zone devices such as a door contact within 100 feet of the 1119 sounder. Use 22 or 18 AWG wire to complete the connections between the 1119 zone and the zone device. Terminate the zone with the included 470k EOL resistor as shown.

The 1119 has been designed primarily for use with the XR150/XR550 Series control panels and is capable of sending to the wireless receiver the open, normal, or short condition of the zone. In addition, a separate tamper signal is sent. However, when used with the XTLC, XTLplus, or XT30/XT50 Series panels, the tamper indication is sent to the panel as an open condition of the zone. When programmed as a Day type zone, an 1119 tamper during the day is announced at the keypad as an Alert. When programmed as a Night type zone, a tamper during the day is announced as a Tamper at the keypad.

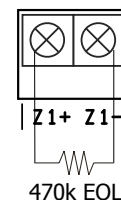


Figure 4: Zone Terminal

Powering the 1119

When setting up a wireless system, it is recommended to program the zone and sounder output, and connect the receiver before installing batteries in the 1119.

Battery Power

! Observe polarity when installing the batteries. Use only 3.0V Lithium batteries, DMP Model CR123, or the equivalent battery from a local retail outlet.

1. Remove the locking screw from the sounder housing.
2. Lift the cover from the bottom to remove.
3. If replacing the batteries, remove the used batteries and dispose of properly. Always replace both batteries at the same time.
Caution: Properly dispose of used batteries. Do not recharge, disassemble, heat above 212° F (100° C), or incinerate. There is a risk of fire, explosion, and burns with improper disposal.
4. Place the two 3.0V Lithium batteries in the holders and press into place. See Figure 2 for battery location.
5. Set the cover back in place and replace the locking screw.

Battery Life Expectancy

Typical battery life expectancy for the 1119 is 2 1/2 years when programmed as a slow response output where the sounder is operated for five minutes once a month and 3 months when programmed as fast response output. Refer to the appropriate programming guide for more information. DMP wireless equipment uses two-way communication to extend battery life.

The following situation can extend battery life expectancy:

- Using a slow response output
- Infrequent transmission trips, such as a door that is rarely used
- Extend transmitter supervision time in panel programming

The following situations can reduce battery life expectancy:

- Multiple sounder on/off operations
- If a receiver is unplugged or not installed
Note: Transmitters continue to send supervision messages until a receiver returns an acknowledgement. After an hour the transmitter only attempts a supervision message every 60 minutes.
- Using a fast response output
- When installed in extreme hot or cold environments

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm (7.874 in.) from all persons. It must not be located or operated in conjunction with any other antenna or transmitter.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Information

This device complies with Industry Canada Licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Specifications Battery Life Expectancy 2 ½ Years (Slow Response) 3 Months (Fast Response) Type 3.0V Lithium CR123A See Battery Life Expectancy for full details. Frequency Range 905-924 MHz Dimensions 4.65" L x 3.1" W x 1.4" H Color White Housing Material Flame retardant ABS	Compatibility XR150/XR550 <ul style="list-style-type: none">• 1100X Wireless Receiver Version 104 or higher• 1100XH Wireless Receiver Version 105 or higher XT30/XT50 <ul style="list-style-type: none">• 1100D Wireless Receiver Version 104 or higher• 1100DH Wireless Receivers Version 105 or higher• 1100DI Wireless Receivers Version 105 or higher Built-In 1100 Series Receiver <ul style="list-style-type: none">• XT50 Series panels Version 101 or higher• XTLC Series panels• XTPlus Series Panels
Accessories CR123 DMP 3.0V Lithium Battery	Patents U. S. Patent No. 7,239,236
	Certifications FCC Part 15 Registration ID CCKPC0123R8 IC Registration ID 5251A-PC0123R8
	INTRUSION • FIRE • ACCESS • NETWORKS
800-641-4282 www.dmp.com Designed, Engineered and Manufactured in Springfield, Missouri	2500 North Partnership Boulevard Springfield, Missouri 65803-8877