

1136 WIRELESS REMOTE CHIME

Installation Guide

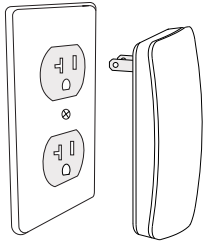


Figure 1: 1136

DESCRIPTION

The 1136 Wireless Remote Chime is a multi-function sounder that plugs directly into a standard 110 VAC wall outlet.

The 1136 provides extra annunciation in installations that benefit from a louder keypad chime, or small applications where no keypad is installed and the system is controlled from an app.

The 1136 annunciates Chimes (Zone Monitor), as well as Entry Delay, Exit Delay and Alarm messages.

Compatibility

- All DMP 1100 Series Wireless Receivers and burglary panels

What is Included?

- 1136 Wireless Remote Chime

Additional Resources

- [XR150/XR550 Programming Guide \(LT-1232\)](#)



1 PROGRAM THE PANEL

The 1136 is programmed in the panel as a wireless output. Refer to the panel programming guide as needed.

For panels with Version 171 firmware or below, there must be a wireless keypad installed on-site and programmed into the system for the 1136 to function properly.

1. In **OUTPUT INFO** (XR Series) or **OUTPUT SETUP** (XT Series and XTL Series), enter the **OUTPUT** number. For the first 1136 added to a system, use the following output numbers:

Panel	First Output Number	Additional Output Numbers
XT Series	34	31-33 and 41-44
XTL Series	54	51-53 and 61-64
XR Series	453	450-452, 454-474, and 480-499

2. Enter the **OUTPUT NAME**.
3. Enter the eight-digit **SERIAL#** and press **CMD**.
4. Enter the **SUPRVSN TIME** (Supervision Time) and press **CMD**.
5. Select **NO** when **TRIP WITH PANEL BELL** displays. Selecting **NO** will allow the device to listen for keypad messages to sound instead of bell options.
6. Press the back arrow when **OUTPUT SETUP** displays.
7. For XR systems that need to send trouble notifications about the Chime, see *Additional Programming* below.
8. Press **CMD** until **STOP** displays and then press any top row select key or area to save and exit programming.



Note: If there is a wireless keypad programmed into the panel, the 1136 will annunciate based on the display areas of the first wireless keypad.

If there is not a wireless keypad programmed into the panel, the 1136 will use the display areas of the keypad programmed as device 1 in Device Setup to determine what zones sound the 1136.

2 SELECT A LOCATION

The 1100 Wireless Series provides a Survey LED capability on most transmitters to allow one person to confirm communication with the wireless receiver or panel while the cover is removed.

This device does not have the Survey LED functionality so use either an 1101 Universal Transmitter or 1106 Universal Transmitter to perform the following test to select a good location for the 1136.

1. With the cover removed, hold the transmitter in the exact desired location.
2. Press the tamper switch to send data to the panel and determine if communication is confirmed or faulty.



Confirmed: If communication is confirmed, for each press or release of the tamper switch, the LED blinks immediately on and immediately off. Repeat this test to confirm five separate consecutive LED blinks. Any indication otherwise means proper communication has not been established.



Faulty: If communication is faulty, the LED remains on for about 8 seconds or flashes multiple times in quick succession. Relocate the transmitter until the LED confirms clear communication.



Note: If the DMP-recommended survey tests cannot be followed, see *Test the 1136* below for more details.

3 PLUG IN THE 1136

Once you have located an outlet with confirmed communication to the panel, plug in the 1136.

⚡ Caution: To reduce the risk of electric shock, do not remove or open the 1136's cover.

4 TEST THE 1136

After the 1136 has been programmed and plugged in to an outlet, test the 1136 to confirm that it is communicating clearly with the panel. Use the Tech APP™ to perform a Sensor Test on the system, or follow these steps to perform a Walk Test from a keypad connected to the system:

1. At the keypad, enter **8144** (WALK) and select **WLS**.
2. If the 1136 fails to check in at the keypad, relocate it to a different outlet.

ADDITIONAL PROGRAMMING

When using an XR Series Panel, to receive notifications that there is a trouble on the 1136, go to the **AUX 1 ZONES** in Status List and enter in which keypad addresses you would like to receive notifications. See the Status List section of the XR150/XR550 Programming Guide (LT-1232) for more information.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm (7.874 in.) from all persons. It must not be located or operated in conjunction with any other antenna or transmitter.

Changes or modifications made by the user and not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

INDUSTRY CANADA INFORMATION

This device complies with Industry Canada Licence-exempt RSS standards. Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

This system has been evaluated for RF Exposure per RSS-102 and is in compliance with the limits specified by Health Canada Safety Code 6. The system must be installed at a minimum separation distance from the antenna to a general bystander of 7.87 inches (20 cm) to maintain compliance with the General Population limits.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. *l'appareil ne doit pas produire de brouillage, et*
2. *l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.*

L'exposition aux radiofréquences de ce système a été évaluée selon la norme RSS-102 et est jugée conforme aux limites établies par le Code de sécurité 6 de Santé Canada. Le système doit être installé à une distance minimale de 7.87 pouces (20 cm) séparant l'antenne d'une personne présente en conformité avec les limites permises d'exposition du grand public.

1136 WIRELESS REMOTE CHIME



Specifications

Frequency Range	905-924 MHz
Color	White
Housing Material	Flame retardant ABS
Dimensions	2.6 in W x 5 in H x 1.5 in D 6.6 cm W x 12.7 cm H x 3.8 cm D

Certifications

FCC Part 15	Registration ID CCKPC0193
Industry Canada	Registration ID 5251APC0193

Patents

U.S. Patent No. 7,239,236



Designed, engineered, and manufactured in Springfield, MO using U.S. and global components.

LT-1669 21133

© 2021

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard
Springfield, Missouri 65803-8877

800.641.4282 | DMP.com